


Unenclosed tiled shower

Unenclosed tiled shower
minimum extent of waterproof
membrane

© BRANZ 2009

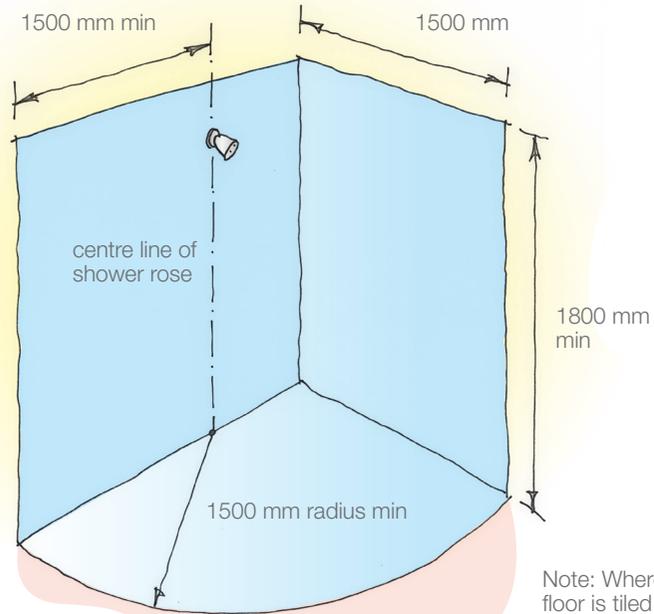

Note: Where the whole floor is tiled BRANZ recommends that the waterproof membrane is extended under the whole floor.